

Motorized Table Series



Manual



Before using this product, please read the directions and please keep it safely for future implementation.

the Way of Installation

- A、 Install the two tripods with casters in the boxes on the both sides of the elevator base respectively, Tightening them by four $\Phi 8$ screws of inside hexagonal nuts or screws with wrench.
- B、 Tight the table plate with four $\Phi 8$ inside Hexagon screw on the support board.
- C、 Plug the plug of the elevator into the socket in place by the same direction.
- D、 Please pay attention to that the voltage the elevating platform using is 220V or 110V.

Motorized Table

The mototized table using foreign advanced technology,good looks,good performance,safe,reliable,load up to 75Kg.Table height of raise is from 63-82cm.Mobile is simple and convenient,low noise,balanced movements advantages rate.suitable for computer,medical equipment,such as supporting a wide range of desktop machines.

Fault repair

Around the foot platform is not parallel

- 1、 Use open end wrench to adjust the wheels if the feet are not paralleled.
- 2、 Put the machine on the ground, do not to be fixed tight to the machine after the suppression of parallel screws tight.

Can not take-off and landing platform

- 1、 Check the power switch to open an account whether or not light up when.

Check whether the plug inserted in place-forced to plug the power cord plugs in the end.

Check the power socket on the fuse is blown-with the word screwdriver insurance insurance insurance seat prized possession of the aircraft, remove the back up insurance will be followed by the pipe replacement fuse frame interpolation in accordance with the direction of the original back.

Inspection machines and table control switch connector plug is inserted in place-the direction of the two plug in the same plug-in plug to plug off-spring are followed by the word from a small screwdriver inserted into the top spring in place.

Slow movements can not

- 1、 Check whether the use of the voltage-voltage 220V/50HZ-if faith can be the start capacitor motor based on the original height after to replace the 8-10UF capacitor.

4 machine screws fastening jacket the jacket up to or separate from Changhong can see a long black circular capacitor. The capacitance of the two original wires cut, and then raised after the two wires connected to the capacitor, there is no positive and negative direction, the wire insulation can handle.



3A



3A(longer)



3E



3AT



3ADT



3AH



3C



3D



3DT



3F

Accessories of Motorized Table

model	table-board size (cm)	Table-board Installation				Feet Installation										plastic wheel 1pcs
		Φ6 hex wrench 1pcs	Φ6 hex socket cap screw 4pcs	Φ6 spring washer 4pcs	Φ6 bolt washer 4pcs	10-12 open end wrench 1pcs	12-14 open end wrench 1pcs	Φ8 hex screw 4pcs	plastic plug 4pcs	Φ8 hex wrench 1pcs	Φ8 hex socket cap screw 4pcs	Φ8 spring washer 4pcs	Φ8 bolt washer 4pcs	Φ8 nut 4pcs		
3AH	48*58	√	√	√	√		√		√	√	√					
3D	48*58	√	√	√	√		√		√	√	√					
3DT	40*68*12	√	√	√	√		√		√	√	√					
3F	40*58	√	√	√	√		√		√	√	√					
3C	40*48	√	√	√	√	√	√	√				√	√	√		
3A	40*48	√	√	√	√	√			√	√	√	√	√	√	√	
3A longer	50*80	√	√	√	√	√			√	√	√	√	√	√	√	
3AT	40*58	√	√	√	√		√		√	√	√	√	√	√		
3ADT	40*68*12	√	√	√	√		√		√	√	√	√	√	√		
3E	48*48	√	√	√	√	√			√	√	√	√	√	√	√	