

PATTERN OPENER



User's Manual

1. Safety Precautions

- (1.) Don't use this machine for other purposes than pattern the lens;
- (2.) While the machine is working ,don't touch the turning wheels to avoid getting injured;
- (3.) Don't use this machine when the power requirements (voltage and frequency) are not met,you should be clear about the actual working power supply;
- (4.) Don't put the machine at the place of high temperature and sun shining;
- (5.) If any liquid or other materials come into the machine, turn the switch off immediately and pull the plug out of the wall socket; Please don't start the machine again until the machine is thoroughly checked and repaired by an expert in this line;
- (6.) Don't install other parts at will except the original parts of this machine;
- (7.) Don't have the machine too heavy working load, don't dash any parts of this machine.

2. How To Use

1. Select a liner lens or lens to make template firstly, fix the suction cup in the central position of liner lens or lens, then install them to the permanent seat of lens and clamp to ready for making a template.

2. Put the ready template to the position of placing template (as shown), fix well by the screw.

3. Turn on the switch and put down the machine head slowly, keep the template in the central position of miller, put the protective cover to avoid the splash of sawdust.

4. Lift the machine head upward after the template rotates for a circle, carefully take down the template finished, and then trim the burr on the edge of template with the milling cutter.

3. Name of Parts

